


Q

進行模態分析後，如何查看單一節點各方向振態結果？

A

進行模態分析後，欲查看與各節點相關的詳細資料，可至 Results > Result Tables > Vibration Mode Shape 功能指令，由 Record Activation Dialog 視窗左邊確認查看的節點編號，視窗右邊勾選對應的模態，按 OK 開啟表格。表格開啟後切換到 Participation Vector Mode 頁面，即可於表單內查看各節點對應的資料結果。

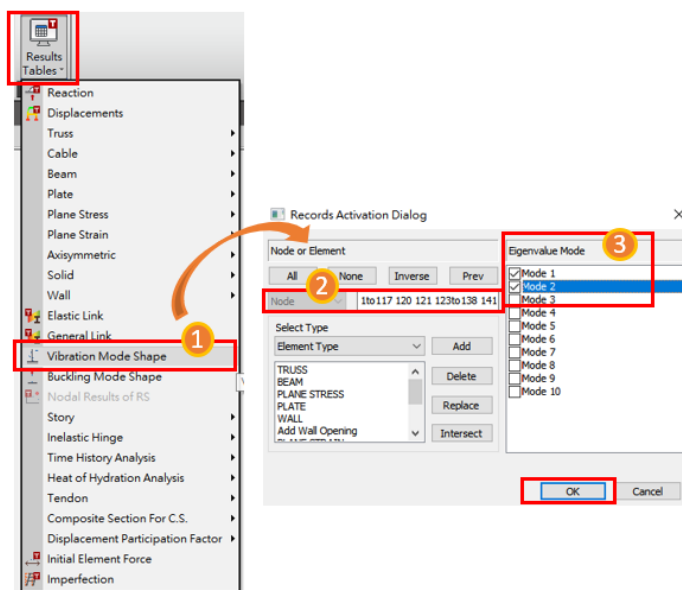

Node	Mode	UX	UY	UZ	RX	RY	RZ
46	1	0.3481	0.0190	0.0000	0.0000	-0.0000	0.3088
47	1	0.3332	0.0190	0.0000	0.0000	-0.0000	0.3088
48	1	0.3459	0.0136	-0.0000	0.0000	-0.0000	0.3088
49	1	0.3332	0.0136	-0.0000	0.0000	-0.0000	0.3088
50	1	0.3332	0.0083	-0.0000	0.0000	-0.0000	0.3088
51	1	0.7918	0.0465	0.0000	0.0000	0.0000	0.6687
52	1	0.6829	0.0465	-0.0000	0.0000	0.0000	0.6687
53	1	0.7215	0.0598	-0.0000	0.0000	0.0000	0.6687
54	1	0.7215	0.0117	0.0000	0.0000	0.0000	0.6687
55	1	0.6829	0.0117	0.0000	0.0000	0.0000	0.6687
56	1	0.7731	0.0233	0.0000	0.0000	0.0000	0.6687
57	1	0.6829	0.0233	-0.0000	0.0000	0.0000	0.6687
58	1	0.7638	0.0117	0.0000	0.0000	0.0000	0.6687
59	1	0.7918	0.0598	-0.0000	0.0000	0.0000	0.6687
60	1	0.7824	0.0349	0.0000	0.0000	0.0000	0.6687
61	1	0.6829	0.0349	-0.0000	0.0000	0.0000	0.6687
62	1	0.7538	0.0598	-0.0000	0.0000	0.0000	0.6687
63	1	0.7538	0.0349	-0.0000	0.0000	0.0000	0.6687
64	1	0.7445	0.0233	0.0000	0.0000	0.0000	0.6687
65	1	0.7538	0.0465	-0.0000	0.0000	0.0000	0.6687
66	1	0.7215	0.0465	-0.0000	0.0000	0.0000	0.6687
67	1	0.7215	0.0233	-0.0000	0.0000	0.0000	0.6687
68	1	0.7215	0.0349	-0.0000	0.0000	0.0000	0.6687
69	1	0.7918	0.0532	0.0000	0.0000	-0.0000	0.6687
70	1	0.7215	0.0532	0.0000	0.0000	-0.0000	0.6687
71	1	0.7871	0.0407	0.0000	0.0000	-0.0000	0.6687
72	1	0.6829	0.0407	0.0000	0.0000	-0.0000	0.6687
73	1	0.7778	0.0291	0.0000	0.0000	-0.0000	0.6687
74	1	0.6829	0.0291	-0.0000	0.0000	-0.0000	0.6687
75	1	0.7684	0.0175	-0.0000	0.0000	-0.0000	0.6687
76	1	0.6829	0.0175	-0.0000	0.0000	-0.0000	0.6687
77	1	0.7538	0.0532	0.0000	0.0000	-0.0000	0.6687
78	1	0.7538	0.0000	0.0000	0.0000	-0.0000	0.6687