



在設計中，使用 Steel Design > Steel Code Check，發現有 NG 的斷面。請問如何改爲 OK?

TWN-LSD90 Code Checking Result Dialog

Code : TWN-LSD90 Unit : kgf , cm Primary Sorting Option

Sorted by Member Property Change... Update...

SECT MEMB

CH K	MEMB COM	SECT SHR	SEL	Section		LCB	Len Lb	Ly Lz	Cb	Ky	B1y	B2y	Pu	Muy	Muz	Vuy	Vuz
				Material	Fy					Kz	B1z	B2z	pPn	pMny	pMnz	pVny	pVnz
OK	31	43	<input type="checkbox"/>	B3, RH 396x199x7x11		5	535.000	535.000	1.000	1.000	1.000	1.000	0.00000	-1.4E+6	0.00000	0.00000	-7017.2
	0.767	0.188		SS400	2500.00		535.000	535.000		1.000	1.000	1.000	160650	1832296	327890	39402.0	37422.0
NG	33	61	<input type="checkbox"/>	C1, RH 294x302x12x12		5	300.000	300.000	1.000	1.000	1.000	1.000	-25645	797198	-1.1E+6	7299.53	-5606.7
	1.315	0.118		SS400	2500.00		300.000	300.000		1.000	1.000	1.000	205848	2725669	1187178	65232.0	47628.0

Connect Model View View Result Ratio...

Select All Unselect All Re-calculation <<

Graphic... Detail... Summary... Close

Result View Option All OK NG

Summary by LCB... Copy Table



程式可以幫您更改斷面，請按照我的步驟

1. 勾選斷面 33
2. 然後按 change

TWN-LSD90 Code Checking Result Dialog

Code : TWN-LSD90 Unit : kgf , cm Primary Sorting Option

Sorted by Member Property Change... Update...

SECT MEMB

CH K	MEMB COM	SECT SHR	SEL	Section		LCB	Len Lb	Ly Lz	Cb	Ky	B1y	B2y	Pu	Muy	Muz	Vuy	Vuz
				Material	Fy					Kz	B1z	B2z	pPn	pMny	pMnz	pVny	pVnz
OK	31	43	<input type="checkbox"/>	B3, RH 396x199x7x11		5	535.000	535.000	1.000	1.000	1.000	1.000	0.00000	-1.4E+6	0.00000	0.00000	-7017.2
	0.767	0.188		SS400	2500.00		535.000	535.000		1.000	1.000	1.000	160650	1832296	327890	39402.0	37422.0
NG	33	61	<input checked="" type="checkbox"/>	C1, RH 294x302x12x12		5	300.000	300.000	1.000	1.000	1.000	1.000	-25645	797198	-1.1E+6	7299.53	-5606.7
	1.315	0.118		SS400	2500.00		300.000	300.000		1.000	1.000	1.000	205848	2725669	1187178	65232.0	47628.0

Connect Model View View Result Ratio...

Select All Unselect All Re-calculation <<


Graphic... Detail... Summary... Close

Result View Option All OK NG

Summary by LCB... Copy Table


3. 請按 Search Satisfied Section
4. 請您選擇程式給的斷面建議

5. 按 change & Close

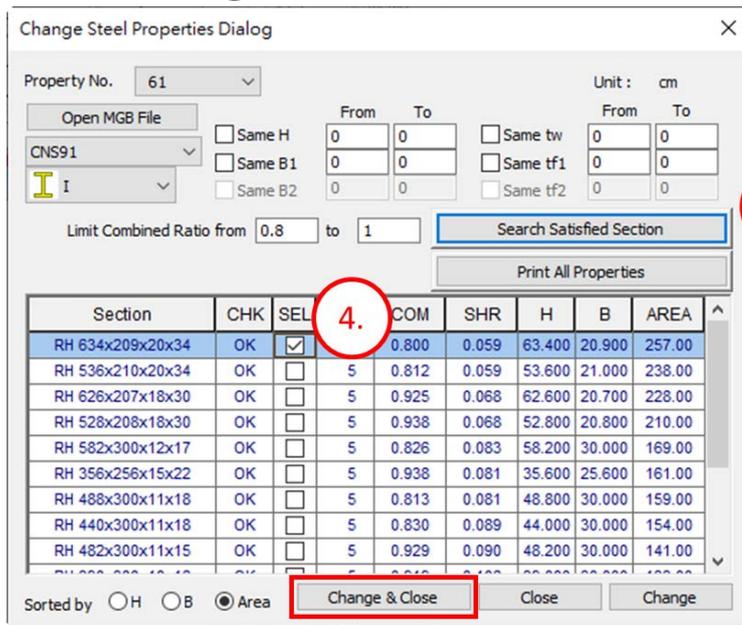

6. 程式會更改您選的斷面，請您再 Select

7. 按 Update, 更新斷面。

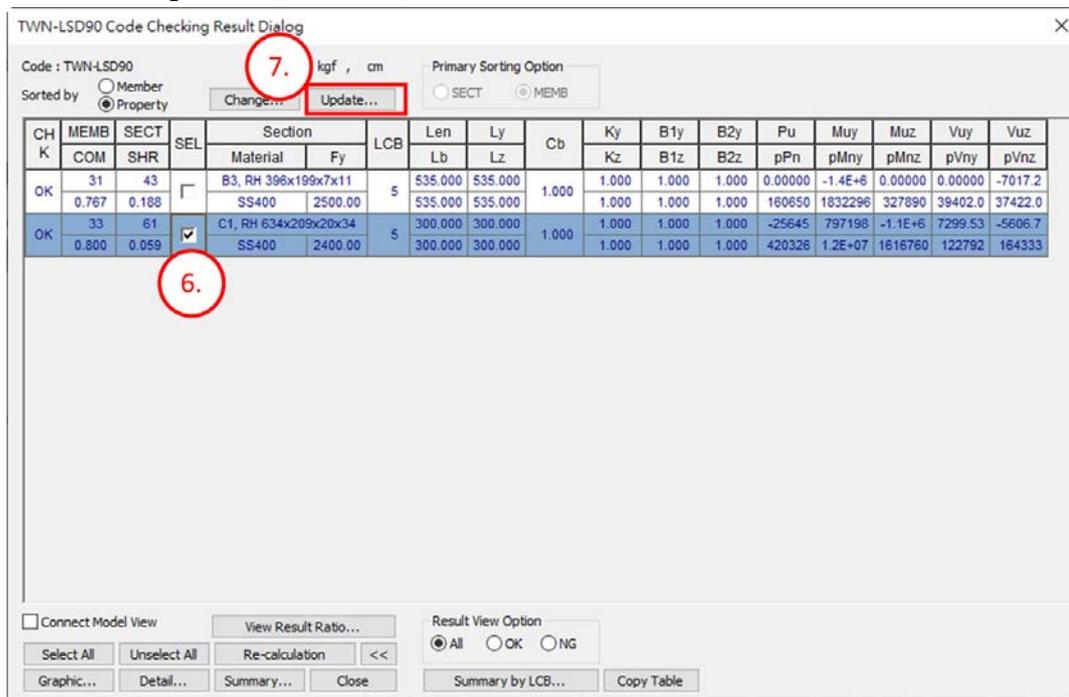

8. 在 Properties After Change, 先 select section 61

9. 按 <-

10. 請您再跑分析，然後您可以在做 Design Steel Check

TWN-LSD90 Code Checking Result Dialog

Code : TWN-LSD90 Unit : kgf , cm Primary Sorting Option

Sorted by Member Property SECT MEMB

CH K	MEMB	SECT	SEL	Section		LCB	Len	Ly	Cb	Ky	B1y	B2y	Pu	Muy	Muz	Vuy	Vuz
	COM	SHR		Material	Fy		Lb	Lz		Kz	B1z	B2z	pPn	pMny	pMnz	pVny	pVnz
OK	31	43	<input type="checkbox"/>	B3, RH 396x199x7x11		5	535.000	535.000	1.000	1.000	1.000	1.000	0.00000	-1.4E+6	0.00000	0.00000	-7014.1
	0.767	0.187		SS400	2500.00		535.000	535.000		1.000	1.000	1.000	160650	1832296	327890	39402.0	37422.0
OK	33	61	<input type="checkbox"/>	C1, RH 634x209x20x34		5	300.000	300.000	1.000	1.000	1.000	1.000	-26603	-2.0E+6	1089096	7541.33	-10371
	0.867	0.063		SS400	2400.00		300.000	300.000		1.000	1.000	1.000	420326	1.2E+07	1616760	122792	164333

Connect Model View

Result View Option All OK NG