



MIDAS

MESH FREE

# 前處理-刪除分析工況&條件

Simple, but Everything.


---

	線性分析1	線性分析2
邊界	邊界-1 邊界-2	邊界-3 邊界-4
載荷	力-1 力-2	力-3 壓力-1

邊界-3和邊界-4要刪除

- ▣ 邊界(4)
  - ▣ 邊界-1
  - ▣ 邊界-2
  - ▣ 邊界-3
  - ▣ 邊界-4
- ▣ 載荷(4)
  - ▣ 力-1
  - ▣ 力-2
  - ▣ 力-3
  - ▣ 壓力-1

力-3和壓力-1要刪除

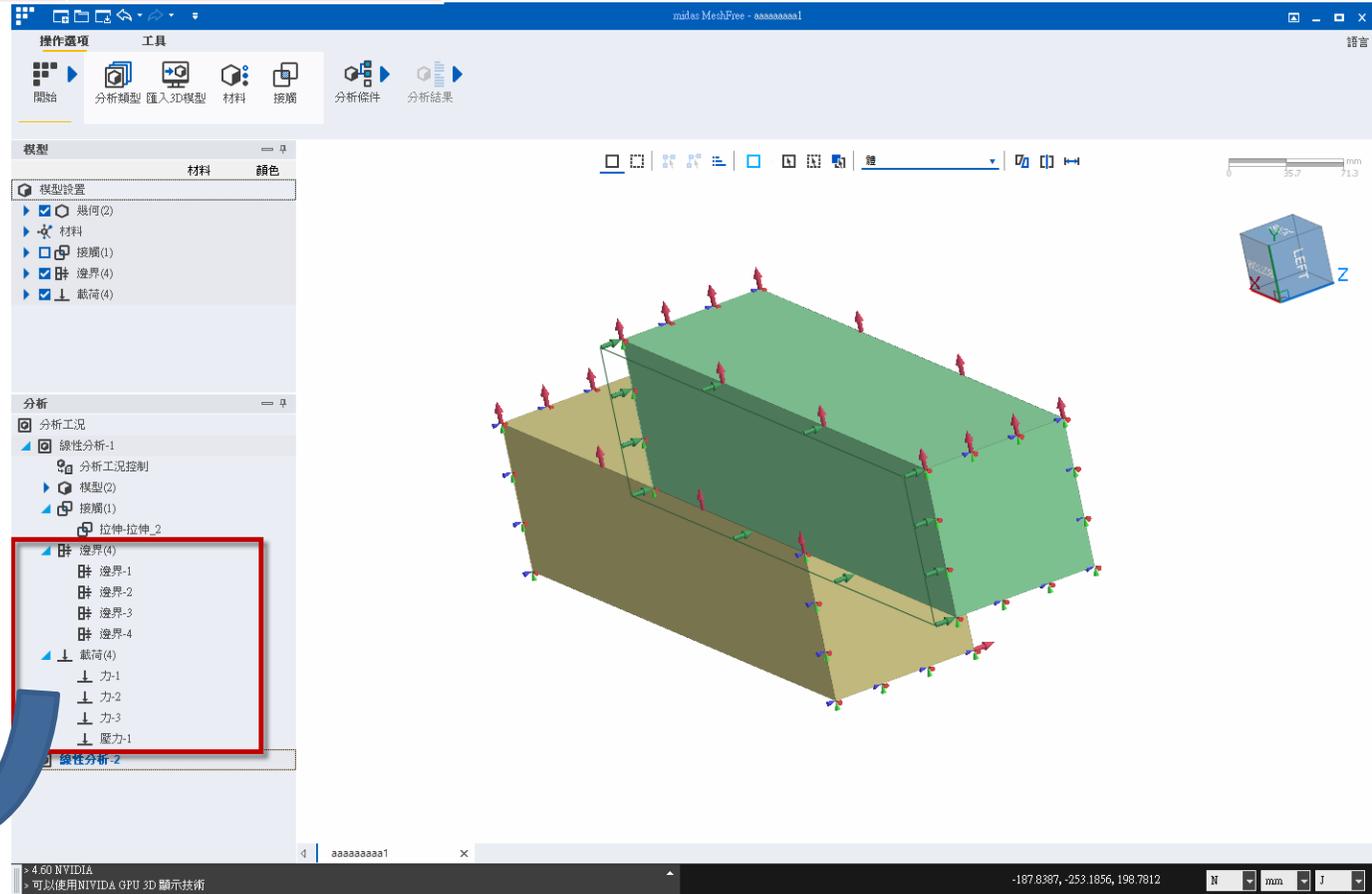




Step1. 點選(邊界-3)按右鍵



Step2. 點選刪除

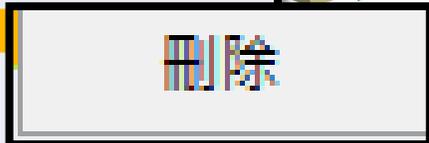

Step3. 載荷採相同方式刪除

